



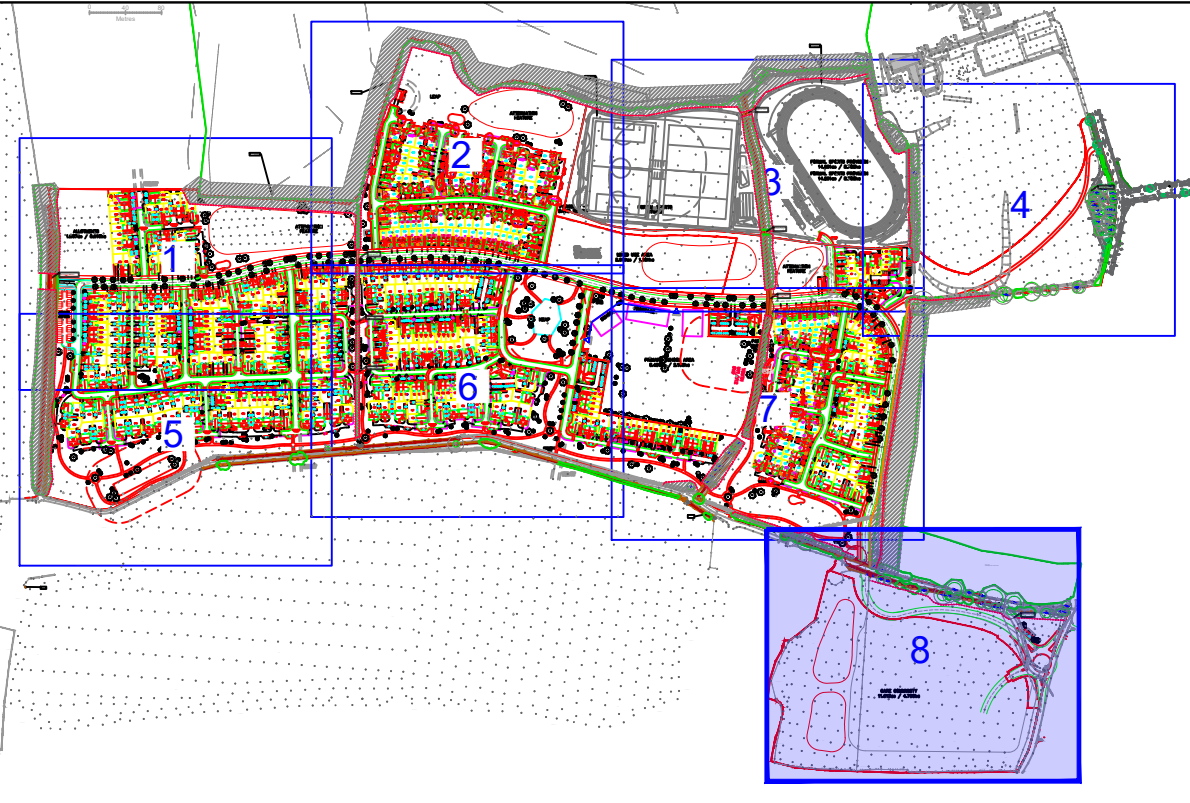

Once erected, all TPF will be regarded as sacrosanct, and will not be removed or altered without prior recommendation by the project architect/artist and approval of the local planning authority. The TPF shall comprise of interlocking well-mesh panels (e.g. Heras), well braced by attachment to scaffold pole uprights driven firmly into the ground. Should any alternative method of barrier construction be proposed, consultation with the project architect/artist will be obtained to ensure the efficacy of the revised design prior to submission to the local planning authority and obtaining their consent. Once the exclusion zone has been protected by barriers and/or ground protection, construction work can commence. All weather notices may be erected on the barriers.

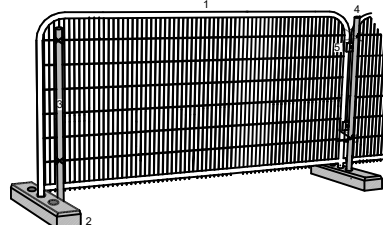

- 1: Weldmesh (e.g. Heras) Panels. 2: Concrete or rubber ground blocks
- 3: Scaffold pole uprights, driven firmly into ground, then secured to panel
- 4: Uprights driven into ground through fixture in ground block, then

Diagram illustrating the criteria for retaining or removing a tree:

- Tree to be Retained:** A green tree labeled 'T1' is shown within a green boundary.
- Tree to be Removed:** A red tree labeled 'T1' is shown within a red boundary.
- Legend:**
 - A CATEGORY TREE:** Green dot
 - B CATEGORY TREE:** Blue dot
 - C CATEGORY TREE:** Grey dot
 - U CATEGORY TREE:** Red dot
- Root Protection Area (RPA) for Retained Trees:** A green dashed line.
- Service Route (SR):** A yellow line.
- Indicative Service Route Avoiding Protection Areas:** A yellow line with a gap.

- ### RESTRICTIONS WITHIN TREE PROTECTION AREAS
- Inside the exclusion area of the fencing, the following shall apply:
- No mechanical excavation, whatsoever
 - No excavation by other means without arboricultural site supervision
 - No hand digging without a written method statement having first been approved by the project manager
 - No lowering of levels for any purpose (except removal of grass sward using hand tools)
 - No storage of plant or materials
 - No storage or handling of any chemical including cement washings
 - No vehicular access
 - No fire lighting
- In addition to the above, further precautions are necessary adjacent to trees:
- No substances injurious to tree health, including fuels, oil, bitumen, cement, building cement washings, concrete, acid concrete mixers and other chemicals shall be stored or used within or directly adjacent to the protection areas of retained trees
 - No fire shall be lit such that flames come within 5m of foliage


PHASING & MONITORING OF DEVELOPMENT

1. Tree removal and access facilitation/pruning
2. Accurate erection of tree protection fencing.
3. Site accessible to construction/demolition traffic
4. Demolition/site clearance
5. Construction
6. Removal of tree protection fencing.
7. Remedial tree surgery

The above phasing must not be changed without approval from the project arboriculturist and agreement with the Council.



The original of this drawing was produced in colour- a monochrome copy should not be relied upon.

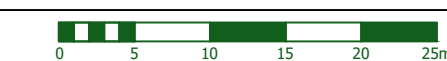

B	03.12.25	Revised site layout	AJB
A	20.11.25	Site re-surveyed	AJB
Rev	Date	Details	Drawn



HEAD OFFICE
Rodbourn Rail Business Centre, Grange Lane,
Malmesbury, SN16 0ES
Tel: 01666 825646

4 & 5 The Old Mill, Fry's Yard, Bridge Street,
Godalming, GU7 1HP
Tel: 01483 425714

Suite 6, Crescent House, Yonge Close,
Eastleigh, SO50 9SX
Tel: 02382 026300

email: mail@acdenv.co.uk
www.acdenvironmental.co.uk

Copyright of ACD. All rights described in Chapter IV of the Copyright, Designs and Patents Act 1988 have been generally asserted: 2015. Copyright of this plan remains with ACD until all fees have been paid in full.

Scheme: Imberhorne Farm
 East Grinstead
 Client: Vistry Homes
 Drawing: Tree Protection Plan
 Date: November 2025
 Scale: 1:500@A1
 DWG no: VYH24065-03
 Sheet 8 of 8
 Drawn: AJB checked: JC