

REF No:


PROJECT NAME: Southway Junior School

SPECIFICATION SUMMARY

| | |
|------------------------------------|---------------------------|
| System | Bauder Total Roof System |
| Project plan | New Build |
| Applicable Structural decks | New Plywood or OSB/3 Deck |
| Roof construction | Warm Roof |

Reinforced bitumen membrane warm roof covering system - self adhered

Two-layer, self-adhered, warm roof, bitumen membrane waterproofing system suitable for both new build and refurbishment applications. Option of using a root-resistant cap sheet for green roofs. Can be used in uninsulated and inverted roof scenarios. Flame free detailing for application in the vicinity of combustible construction materials.

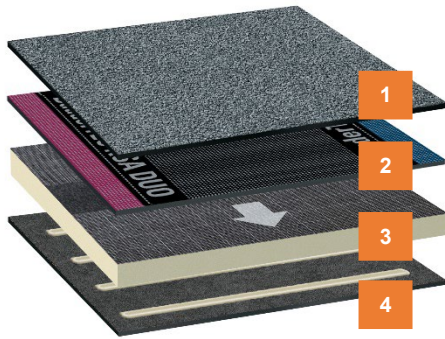

| Product | Description | Thickness | Weight |
|--|--|--|------------------------------|
| 1 Bauder K5K Capping Sheet | Torch bonded, elastomeric bitumen capping sheet; 250g/m ² spunbond polyester reinforcement. | 5.2mm | 6.5Kg/m ² |
| 2 BauderTEC KSA DUO Underlayer | Self-adhesive elastomeric bituminous membrane; glass lattice reinforcement; 'DUO' lap technology. | 3.0mm | 3.5Kg/m ² |
| 3 BauderPIR FA G16 Tapered Insulation | Foil faced and shaped to create effective drainage falls. | 120mm <i>Approx. average thickness – Thickness subject to tapered scheme design</i> | 4.56 Kg/m ² |
| 4 BauderTEC KSD FBS Air & Vapour Control Layer | Self-adhesive elastomeric bitumen air and vapour control layer; mica finished upper surface. | 2.5mm | 2.5Kg/m ² |
| System Build up | | 130.70mm | 17.06Kg/m² |

SYSTEM OPTIONS

| MEMBRANE COLOURS | |
|---|---|
| Charcoal grey 6.5Kg/m ² |  |
| Grey slate 6.0Kg/m ² |  |
| Brown 6.0Kg/m ² |  |
| PLANT E Root resistant 6.0Kg/m ² |  |

| INSULATIONS | BauderPIR FA-TE Flatboard | BauderPIR FA G16 Tapered | Weight Loading |
|----------------|--|--------------------------|-------------------|
| THICKNESS (mm) | Approx 'U' VALUE (W/m ² K) assuming concrete, metal or plywood deck | | Kg/m ² |
| 120 | 0.17 | 0.17** | 4.56 |
| 130 (50+80) | 0.16 | 0.16** | 4.94 |
| 140 | 0.15 | 0.15** | 5.32 |
| 160 | 0.13 | 0.13** | 6.08 |
| 180* (60+120) | 0.12 | 0.12** | 6.84 |
| 190 (30+160) | 0.11 | 0.11** | 7.22 |

* denotes thicknesses only available for orders over 1000m²

** denotes U-value based on the average thickness

REF No:

PROJECT NAME: Southway Junior School

IMPORTANT NOTE

Please note that changes made to the content of this document, outside of the available choices may impact technical suitability and eligibility to meet Bauder Limited's requirements for guarantee. For additional items to be added, not already included, please contact your local Area Technical Manager.

Design Information and Supporting Documents

This specification is to be read in conjunction with the supporting Specification-Appendix & Flame Free Report (where applicable), Calculations (where available), Bauder Installation Guides and Bauder Standard Detail Drawings.

This specification has been produced based on the information supplied at the time of writing and is deemed to apply subject to the conditions outlined below, unless additional calculations proving otherwise have been completed and issued to you by Bauder Ltd or an approved supplier.

Windloads: Suitable for roofs where the design load does not exceed 3.2KN/m². Should the site be situated in a location subject to increased windloads or have a Design Windload Pressure suspected to be exceeding this, Bauder Ltd must be informed and a site specific windload calculation must be completed.

U-Values: U-Values quoted are based on the Bauder waterproofing system build up including insulation and underlying deck material only. This does not include the supporting structure and/or any other materials within the construction below the deck, unless Bauder has been advised otherwise prior to producing the calculations. Refer to the project specific U-Value Calculation for additional information.

Drainage: Where Bauder Ltd have produced supporting drainage calculations based on the data supplied, and the resulting calculation states that 1 drainage outlet will be sufficient, Bauder Ltd additionally recommends the use of overflows on all roofs and that there should always be at least 2 outlets and/or overflows per drainage area.

Emergency overflows/Tell-tale overflows: The requirement and location for overflows is based upon many variables including attitude to risk and the likelihood of regular maintenance, they should be determined by the appropriate Engineer.

A full capacity overflow should be provided when there is only one outlet on a given roof area.

Emergency overflows can be in the form of a raised outlet or outlet fitted with an integral overflow pipe cut to the correct height, or **Overflows** for parapets installed as raised through chute. These are designed to substantially reduce the volume of water accumulating but may not indicate there is a blockage or problem on the roof.

A **tell-tale overflow** has a low flow rate and is only intended to indicate to the building user that there is a blockage or problem on the roof and urgent maintenance is required.

Emergency overflows or Tell-tale overflows, when provided on flat roofs with parapets and in non-eaves gutters to reduce the risk of overspilling of rainwater into a building or structural overloading.

Where the roof design drains internally and direct to sump or outlet locations, additional emergency outlets should be considered, as a blockage may cause the water to back-up and overflow the high point with the possibility of structural overload.

Bauder can supply a range of drainage products to meet the above requirements. The location, product type, and number of overflows specified is to be determined by an appropriate Engineer.

REF No:

PROJECT NAME: Southway Junior School

NBS SECTION J41 - DESCRIPTION OF WORKS

Section J41 deals with the installation of the Bauder Waterproofing System, comprising coverings of multiple layers of reinforced bituminous membranes laid and jointed using self-adhesive and/or torch application as required. It includes where required, the air and vapour control layer, thermal insulation, underlayer and capping sheet membranes (root resistant for green roof systems) and presumes the deck substrate and roof falls as stated within the specification below. Accessories are included where relevant.

It is intended for use on projects where the detailed design is completed by the specifier (architect or landscape architect) with technical assistance from the manufacturer as required and should be read in conjunction with any project specific drawings provided.

Fire Regulations (Fire Safety: Approved Document B 2019) - Compartmentation

Approved Document B Vol 1: Dwellings Section 5 Internal Fire Spread covers Compartmentation (Compartmentation is covered in Section 8 of Vol 2: Buildings other than dwellings and for Scotland, Wales and NI similar consideration is necessary for both Dwellings and Buildings other than Dwelling) and there is a consideration to be made if the roof goes over a compartment wall. For New Build we will expect the Principal Designer to establish Building Control requirements and notify accordingly before construction. For Refurbishment it is not always easy for the roofing team to establish if there is a compartment wall under the roof and what is its full orientation, we will rely on the specifier or client to tell Bauder Ltd if there is a known compartment wall under the existing roof. As the requirements have proven to be open to various interpretations across Building Control authorities, the Bauder advice is to consult with the Building Control officer for the building.

'Safe2Torch' advice:

The application of torch-on materials to or in the vicinity of combustible deck materials does not conform to the recommendations of BS8217:2005, clause 7.3.2.1, paragraph 3, or the advice given in the 'Safe2Torch' document produced by the National Federation of Roofing Contractors. When encountering an area which contains combustible material a minimum 900mm deep zone of the flat area around the material and any detail flashing to the material itself there is a requirement for 'FLAME-FREE' detailing. In these instances an appropriate alternative Bauder self-adhesive membrane should be used as described in: 'FLAME-FREE' & 'Safe to Torch' DETAILING - ALTERNATIVE MEMBRANES AND APPLICATION. The 'FLAME-FREE' & 'SAFE TO TORCH' detailing and method of application will be described in the Additional Items section and the 'FLAME-FREE' & 'SAFE TO TORCH' DETAILING section of this specification and further detailed in the Bauder 'FLAME-FREE' & 'Safe to Torch' drawings.

Please note, there could be 'FLAME-FREE' areas within the roof area(s), however there are either no roof plans available or the design is not sufficiently complete at this stage in the project to enable Bauder to complete a 'FLAME-FREE' roof plan. Once this plan becomes available and the design is sufficiently complete, please contact the Bauder Area Technical Manager (details at the end of the specification) and this can then be created for this area.

SCOPE OF WORKS

This section includes:

- The Bauder waterproofing system.

REF No:

PROJECT NAME: Southway Junior School

- Related Bauder system accessories
- Thermal insulation that meets the required U Value.
- Internal/parapet rainwater outlets (but not the connected drainage/plumbing goods)

This section does not include:

- Construction of the structural deck.
- Proprietary rainwater drainage / plumbing – refer NBS section R10
- Lightning protection – refer NBS Engineering Services, Section W60.
- Latchways Constant Force Post System – refer NBS Section N25.
- Stairs/Ladders/Handrails/Balustrades – See NBS Section L30

J41 REINFORCED BITUMEN MEMBRANE ROOF COVERINGS

To be read with Preliminaries/ General Conditions.

TYPES OF COVERING

110 BUILT-UP REINFORCED BITUMEN MEMBRANE WARM DECK ROOF COVERING

- **Roof area: Tank Room Roof**
- **Substrate:** New Plywood / OSB/3 deck.
 - For the purpose of the tapered insulation scheme design, the roof deck is assumed to be level.
 - Roof falls to be provided by the tapered insulation scheme.
 - The design should take account of construction tolerances, permitted deviations and deflections under load, as per Item 4.4 of BS6229:2018.
 - No deflections or back-falls.
 - **Preparation:** As clause 610A.
- **Primer: Bauder Activator-Primer (Canister), APR01-Black**, applied to the roof substrate and all upstands and skirtings. For application method and guidance information, refer clause 660B.
- **Air & vapour control layer: BauderTEC KSD FBS**, 2.5 mm thick aluminium lined, elastomeric bitumen self-adhesive air and vapour control layer mica finish. Installation as clauses 670G, 710.
- **Insulation: BauderPIR FA G16 Tapered** insulation scheme, aluminium foil faced, rigid urethane insulation.
 - The scheme may incorporate the use of aluminium foil faced **BauderPIR FA-TE Flatboard** insulation installed as base-layer(s), and **BauderPIR GFE G16 (ridge infills) & BauderPIR KFS G16 (valley infills)** where required.
 - For the Environmental Product Declaration (EPD) information refer to EPD-IVP-20160147-IBE1-EN.
 - (Please refer to the Bauder Tapered Insulation Layout drawing for individual board thickness, number of layers and number of ridge & Valley infills required).
 - Installation strictly in accordance with the Bauder Tapered Insulation Layout drawing supplied to achieve the required U value (refer Clause 230).
 - **BauderPIR T KL 50 angle fillets** 50 mm x 50 mm for use with insulated & un-insulated upstands.
 - Installation as clauses 680G and 775.
- **Insulating vertical upstands: BauderPIR FA-TE flatboard**, aluminium foil faced, rigid urethane insulation.

REF No:

PROJECT NAME: Southway Junior School

The vertical upstand(s) should be insulated, typically an external wall to a conditioned/habited space will be insulated in its own right e.g. a cavity wall, but there is still a requirement for a nominal 30mm thickness of insulation on the external face of the wall to reduce thermal bridging at the roof/wall intersection.

This insulation will be a minimum of 300mm in height from the deck surface to the top of the upstand and will ideally be fitted before the flat insulation so that it is retained at the base.

Bauder Insulated Upstand Support Brackets should be installed to secure the top and provide a hard-leading edge.

Rooflight upstands (e.g. Builder's Kerbs) that are not supplied by the rooflight supplier as part of the rooflight assembly must be insulated with 60mm thick **BauderPIR FA-TE flatboard** insulation to achieve a maximum U value of 0.35W/m²K.

Installation as clause 681B.

- **Waterproof covering:** BAUDER TOTAL ROOF SYSTEM
- **System manufacturer:** Bauder Limited, 70, Landseer Road, Ipswich, Suffolk, IP3 0DH. Tel: 01473 257 671. Fax: 01473 230 761. Email: technical@bauder.co.uk
Web: www.bauder.co.uk
Technical Contact Details - Area Technical Manager: Matt Moore ,m.moore@bauder.co.uk
- **Primer: Bauder Activator-Primer (Canister), APR01-Black**, applied to the upper surface of the Bauder insulation. For application method and guidance information, refer clause 660B.
- **Underlayer: BauderTEC KSA DUO**, 3 mm thick, 200g/m² glass-fibre reinforced, elastomeric self-adhesive bitumen underlayer.
Attachment: As clauses 710, 747A.
- **Top layer / Cap sheet: Bauder K5K**, 5.2 mm thick, tensile strength 1000N/50mm, 250g/m² polyester reinforced, elastomeric bitumen torch applied capping sheet, Charcoal Grey Finish
Attachment: As clauses 710, 750A.
- **Flashings and detail work: Bauder K5K** capping sheet, mineral slate finish as per main field area. Install as clauses 773, 775 & 777.
- **Surface protection:** N/A
- **Surfacing:** Designated areas of maintenance access walkway defined using **Bauder capping sheet**, in a contrasting colour finish (where required). Install as clause 863.
- **Accessories:** -
 - **Bauder Bitumen Compact Vertical Outlet DN 100 or Bauder Bitumen Vertical Outlet DN 70 / DN 150**, (where required) (size as required to match drainage pipework) complete with pre-attached bitumen connection flange and dome grating. To be supplied and installed – quantity as required. When this outlet is used within a warm roof construction with insulation depth 60mm or greater, the **Bauder Extension Unit** (supplied separately) must be used. Installation as clause 784A.
 - **Bauder Bitumen Parapet Tell-Tale Overflow DN 50** (on flat roofs with parapets and in non-eaves gutters. Where required in conjunction with the appropriate engineer). Installation as clause 784G.
 - **Bauder GRP edge trim** (where required) to all perimeter kerbs – Profile: Client to confirm / Type 1 (44mm) / Type 2 (44mm) / Type 3 (70mm) / Type 4 (100mm) / Type 6 (150mm). Colour: Client to confirm / Black / Grey. Installation, as clause 785.
 - **Bauder Lightning Conductor Clips** (where required) – Type 4 for PVC coated tapes and uncoated tapes. Installation, as clause 786.
- **Additional Requirements:** 210, 230, 515, 520, 522, 560, 561, 562, 910, 940.
- **Guarantee information:** Refer clause 950A.

PERFORMANCE

REF No:

PROJECT NAME: Southway Junior School

210 ROOF PERFORMANCE

- **General:** Secure, free draining and weather tight.

230 INSULATION

- **Thermal transmittance of roof (maximum):** 0.17W/m²K (120mm avr Tapered)
U-Values quoted are based on the Bauder waterproofing system build up including insulation and underlying deck material only. This does not include the supporting structure and/or any other materials within the construction below the deck, unless Bauder has been advised otherwise prior to producing the calculations. Refer to the project specific U-Value Calculation for additional information.
- **Finished Surface:** Suitably even, stable and robust to receive roof covering.
- **Insulation compliance:** To relevant British Standard or Agrément certified.
IMPORTANT NOTE: Where Tapered Insulation is required, the thickness stated above is an approximate average thickness, please refer to the Bauder Tapered Scheme Drawings for the actual U-Value and min/max insulation thicknesses achieved.

PRODUCTS

330 TIMBER TRIMS, ETC

- **Quality:** Planed. Free from wane, pitch pockets, decay and insect attack (except ambrosia beetle damage).
- **Moisture content at time of covering (maximum):** 22%.
- **Preservative treatment:** Contract Administrator to advise. Please note organic solvent-based timber preservatives are not permitted, as may affect the waterproofing.

331 PREFORMED METAL HARD EDGE INSULATION PROTECTION ANGLES

- **Material:** Galvanised mild steel
- **Thickness:** 1mm
- **Dimensions:** 50 mm x 50 mm
- **Length:** 3m max.

EXECUTION GENERALLY

515 ADVERSE WEATHER

- **General:** Do not lay coverings in high winds, wet or damp conditions or in extremes of temperature unless effective temporary cover is provided over working area.
- **Unfinished areas of roof:** Keep dry, protect edges of laid membrane from wind action.

520 INCOMPLETE WORK

- **End of working day:** Provide temporary seal to prevent water infiltration.
- **On resumption of work:** Cut away tail of membrane from completed area and remove from roof.

522 PROTECTION AND STORAGE OF MATERIALS

- Store the materials in clean, dry, well-ventilated and cool conditions. Where there are storage containers on site, these may be suitable for storing products.
- The products must not be exposed to a direct naked flame or other ignition sources, or to solvents or other chemicals.

REF No:

PROJECT NAME: Southway Junior School

- Store materials designated as temperature sensitive in facilities where temperatures can be maintained at recommended levels.
- Insulation products must be kept dry and protected from wet weather during storage and installation.
- Ensure the product(s) are clear of buildings and any other storage areas.
- Refer to specific Bauder product Technical Datasheet for further information.

560 GENERAL WORKMANSHIP REQUIREMENTS

- Installation of the Bauder waterproofing system may only be carried out by trained and certified operatives approved by Bauder Ltd and who carry current ID badges. These should be available for inspection at all times.
- Workmanship must comply with Codes of Practice BS 8217:2005 (or alternatively Bauder Ltd.'s specification where otherwise stated). Non-compliant workmanship will not be permitted, even if the system is watertight. The client will be told that all such faults must be remedied, before the Guarantee is issued.
- All waterproofing materials and system components must be supplied by Bauder Ltd, unless otherwise stated. Any sub-standard materials or un-authorized alternatives will be rejected. Any building work which is the responsibility of the roofing contractor and has a bearing on the life of the Bauder System must be carried out by properly trained and qualified tradesmen.
- Any structural damage, peculiarities or details discovered that might affect the performance of the Bauder system, should be reported immediately to the client's representative and Bauder Limited in order that they may assist in overcoming the problem.
- At the end of each working day, the new waterproofing should be terminated with a secure and waterproof temporary seal, which will be left in situ, utilising **Bauder** self-adhesive underlayer material (e.g. **BauderTEC Sprint DUO**) to create the seal. The **Bauder** self-adhesive underlayer should be extended onto the flat AVCL by a minimum of 200mm from the exposed edge of the insulation and heat activate to ensure a satisfactory seal.
To ensure that no moisture contamination of the system can occur between each working period, it is essential that the night seal is properly and securely bonded.
- Where building works are to be carried out by other trades, following completion of the waterproofing, the contractor must make adequate provision for supplying protection to prevent damage to the new membranes. The final inspection will not be carried out by the Bauder Site Technician or the Bauder nominated independent surveyor until all associated trades are complete and the roof areas are clear from all debris and protection layers.
- It is imperative that the Bauder Approved Contractor conforms to the workmanship criteria as listed above. Any deviation will result in the contract being considered unguaranteeable.
- All mechanical and electrical work to plant and equipment should be carried out by competent mechanical and electrical qualified tradesmen. All plant is to be reinstated and re-commissioned on completion of the roofing works in accordance with the client's detailed specification.
- Where building works are to be carried out by other trades, following completion of the waterproofing, the contractor must make adequate provision for supplying protection to prevent damage to the new waterproofing.
- If any items of plant/equipment are to be situated on the finished roof, a sacrificial layer of Bauder capping sheet is to be loose laid beneath. This is to extend a minimum of 25mm past the point of contact on all sides. In the case of heavy items, it may be necessary to introduce a load-spreading slab, please contact Bauder for further advice.
- All lead work to be carried out by skilled tradesmen and in accordance with current codes of practice and the recommendations of the Lead Contractor Association.

561 SITE INSPECTIONS

REF No:

PROJECT NAME: Southway Junior School

- Bauder Site Technicians will carry out regular inspections of the project during the course of the works.
- Bauder must be notified when the roof is ready for final inspection and all related works and snagging complete. See also clause 910.

562 HEALTH & SAFETY INFORMATION – ROOFING WORK

1. Follow the advice shown in the “Responsible Specification Checklist” produced by the National Federation of Roofing Contractors.
2. Suitable precautions must be taken to prevent accidents occurring when roofing systems are being installed.
3. The contractor must ensure that adequate measures are taken to effectively prevent injury to members of the public, contractors and any other persons who may be affected by the works including the public.
4. Where microwave equipment is installed at roof level, care must be taken to prevent persons working on the roof from being exposed to large doses of microwave radiation.
5. Similarly, the contractor should liaise with the client to ensure that there are no extract outlets situated on the roof where noxious or harmful emissions could affect persons working. Suitable precautions will be necessary to prevent exposure where this situation arises.
6. The contractor is responsible for providing adequate firefighting equipment in the form of extinguishers during work on the roof. These should be kept in easily accessible locations and be suitably signed.
7. Whenever possible, access to the roof should be made via internal staircases rather than by temporary means. Where this is not available, it is the responsibility of the contractor to ensure a safe means of access, egress and a safe workplace.

As far as roofs are concerned, edge protection in the form of scaffolding or a fixed structure should be in place to a height of 1.1 metres in accordance with the Workplace (Health, Safety and Welfare) Regulations 1992.

Failing this, the hierarchy of controls should be applied from the Work at Height Regulations 2005. Means of access should be by fixed ladder, passenger hoist or scaffolding.

8. The contractor must ensure that suitable written method statements and risk assessments are available for the work being undertaken. In particular, it is essential that manual handling methods be fully assessed as roofing materials are heavy and can cause serious injury.
9. The contractor must ensure that suitable information about the roof covering is provided to the Client at the end of the work to ensure that work in future can be carried out safely. This information will form part of the Safety File.
10. All persons working on the roof should be provided with, and wear, suitable personal protective equipment and wet weather gear. Training must be provided to all contract staff on the safe use of the equipment.

REF No:

PROJECT NAME: Southway Junior School

11. The installer must observe Product Safety Datasheets, relevant to the materials being used as well as completing and complying with COSHH risk assessments.
12. We draw your attention to your duties under the Construction (Design and Management) Regulations 2015. Regulation 4, Client's duties in relation to managing projects states that the client must make suitable arrangements for managing a project, including the allocation of sufficient time and other resources. Regulation 5, Appointment of the Principal Designer and the Principal Contractor states that where more than one contractor will be working on a project at any time, the client must appoint a Principal Designer and a Principal Contractor.

Please note that although Bauder will assist with the roof waterproofing system design, we will not undertake the role of Principal Designer (PD).

Similarly for the Building Safety Act 2022 and the BRAE Regulations the Client has duties which include the appointment of a Principal Designer and/or a Principal Contractor. Bauder recognises its duties as a Designer under the CDM Regulations and the Building Safety Act.

With our skills, knowledge and experience we can help to ensure that the roof design is compliant with the Building Regulations, however we do not have overall responsibility for the planning, management and monitoring of the design work during the design phase. We are not obligated to co-ordinate all matters relating to the design work which are not directly related to the flat roof system specification. Bauder are not in a position where we can take all reasonable steps to ensure compliance with the building regulations for aspects of the building works outside of the flat roofing system design or overall responsibility for co-ordination of such.

13. It is always the responsibility of the contractor to carry out a risk assessment on all aspects of the contract. The 'Safe2Torch' checklist is solely for guidance for the safe installation of torch-on reinforced bitumen membranes and use of gas torches in the workplace.

SUBSTRATES / AIR & VAPOUR CONTROL LAYERS / WARM ROOF INSULATION

610A SUITABILITY OF SUBSTRATE

- **Substrates Generally:**
 - Secure and properly fastened to the sub-structure, clean, dry, smooth, free from frost, corrosion, contaminants, loose material, damage and protrusions.
 - Compatible with waterproofing / coating system.
- **Substrate Design:**
 - Plywood should conform to BS EN 636-3 S (Structural) Condition of Use Service Class 3 (Exterior), minimum 18mm thickness as specified by client.
 - OSB/3 should conform to BS EN 300 & CPD/CE, minimum 18mm thickness as specified by client.
- **Setting out:** The new deck, should be fixed directly to either the joists or firings using non corroding ring shank nails/recommended screw fasteners.
 - All board edges should be fully supported by either the joists, firings or noggins.
 - Board joints to be close butted and staggered in accordance with BS 8217. Expansion gaps between boards on long and short edges to be 3mm.
- **Fasteners:**
 - Type: As recommended by panel manufacturer.
- **Fastener heads:** Flush with, or below the boards surface.

REF No:

PROJECT NAME: Southway Junior School

- **Moisture content and stability of substrate:** The deck should be protected from wetting during transportation, storage and installation on site before the Waterproofing System is installed. Before installing the waterproofing system, moisture readings should be taken into the timber deck and not just the surface. The results should be recorded. Readings should be no more than 20%.
- **Deck Falls:** Refer to clauses 110/120/130 above (where appropriate) for roof specific requirements.
 - No deflections or back-falls shall be present if the deck is designed to achieve a zero falls finished surface.
 - Falls to comply with the drainage requirements of BS 6229:2018 and current codes of practice BS 8217:2005.
 - The design should take account of construction tolerances, permitted deviations and deflections under load, as per Item 4.4 of BS6229:2018.
 - An Engineer's deflection analysis and site level survey should be consulted before commencement of waterproofing. Measures to rectify back-falls or deflection shall be undertaken by the deck installer/supplier prior to commencement of the waterproofing system.
- **Preliminary work:** Complete including:
 - Formation of upstands, kerbs, box gutters, sumps, grooves, chases and expansion joints.
 - Fixing of battens, fillets and anchoring plugs/strips.
- **Preparation:** The approved waterproofing contractor is to inspect the installed deck and report any issues, including insufficient falls, that may have a detrimental effect upon the waterproofing system to both the Clients representative and Bauder Limited.
- **Priming:** Before priming and application of the membrane, the substrate shall be clean and dry, free from surface water, ice, snow or frost, dust, dirt, oil, grease, or any foreign matter detrimental to the adhesion of the waterproofing system.

640 FIXING TIMBER TRIMS

- **Fasteners:** type/length appropriate and suitable to particular deck substrate.
- **Fixing centres (maximum):** 500 mm.

641 INSTALLING PREFORMED METAL HARD EDGE INSULATION PROTECTION ANGLES

- **Location:** Use to provide hard edge protection at all internal gutter channels on warm roofs where the insulation from the flat area steps down to meet the insulation in the gutter sole.
- **Preparation:** Surface to be inspected and cleaned if necessary, using white spirit to remove any contaminants, dirt or dust & primed with the specified Bauder primer. Prepared material to be thoroughly dry before use
- **Installation:** The 50 x 50 mm galvanised mild steel angle to be adhered to the exposed leading edge of the insulation using the specified Bauder primer along the upper surface/edge. The purpose being to retain the metal in position to prevent any post-installation movement.

660B APPLYING PRIMER

- **Primer:** Bauder Activator-Primer (Canister), APR01-Black.
- **Purpose:** Substrate primer to seal and prepare dry surfaces of a variety of common substrate material prior to the application of Bauder self-adhesive bitumen membranes.
- **Before application:** All surfaces must be dry, clean and free from dust, dirt, oil, grease and loose material.
- **Application method:** Spray Applied to provide even and full coverage. Avoid pooling. Never attempt torching within 10 min of primer application, even if the surface appears dry.
- **Application rate:**
 - 300mm wide spray

REF No:

PROJECT NAME: Southway Junior School

- Coverage: Approx. 96 g/m²
- Two coats may be required for very porous substrates.
- **Application temperature:** +5 - +30°C
- **Drying time:** Approx. 5 - 10 mins, dependent upon ambient temperature and material porosity.
- **Coats:** Fully bond. Allow volatiles to dry off thoroughly between coats.
- **Re-application:** Necessary after 4 hours exposure if waterproofing has not yet been applied, to maintain adhesion performance.
- **Caution:** Use only outdoors in well-ventilated areas or with respiratory apparatus and keep away from all sources of ignition. Take necessary precautions to avoid the solvent vapour from entering the buildings ventilation system.

670G LAYING AIR AND VAPOUR CONTROL LAYER

- **Attachment:** Generally, cold applied and fully bonded to substrate in accordance with Bauder requirements.
Metal Decks: With metal decks the sheets should run in the direction of the crowns/troughs, with laps formed on the crowns of the deck to ensure that they are fully supported in accordance with Bauder requirements. To ensure side laps of the air and vapour control layer (AVCL) are fully supported, they will need to have the width cut to suit the profile of the deck or larger laps should be formed. To support end laps, cut approximately 200mm strip off the end of the AVCL roll and apply it taut across the troughs where the roll ends will meet.
Timber Boarded / Cross Laminated Timber Decks: First layer random nailed, as clause 355/720. Second layer, **BauderTEC KSD FBS** cold applied and fully bonded to substrate in accordance with Bauder requirements.
- **Side and end laps:** minimum 100 mm, laid with all laps heat sealed to provide a continuous bitumen bead extrusion. Installation methods as recommended by Bauder.
- **Penetrations:** Fully seal using bonding methods recommended by Bauder.
- **Edges of insulation at roof edges, abutments, upstands, kerbs, penetrations and the like:** Enclose, with air and vapour control layer:
The air and vapour control layer must be dressed up all upstands and to the full extent of the detail. This is to ensure that the detail is fully encapsulated to reduce the risk to exposed combustible materials. The contractor is also to form all details in such a way that the underlayer is fully bonded to the air and vapour control layer to the full extent of the detail ensuring in a minimum fully bonded 100mm lap with the air and vapour control layer – please see Bauder Bituminous detail drawings.
- Care should be taken to ensure adhesion when the temperature is below + 5° C.

680G LAYING WARM ROOF INSULATION - BAUDERPIR FA TAPERED - SINGLE/MULTI LAYER

- **Before installing:** No insulation boards should be laid on site without a copy of the current Bauder Tapered Insulation Layout drawing to hand. Contractors should always refer to the Layout Drawing for the recommended start point and layout of boards. If contractors are unsure whether the correct Layout Drawing is on site, they should contact the Bauder Technical Department before commencing installation. For installation guidance, Contractors should refer to the relevant Bauder Tapered Installation Guide.
- **Deck Suitability:** Bauder cannot be held responsible for the drainage performance of tapered insulation schemes applied to an inappropriate deck surface and it is the responsibility of the installing contractor to check the roof deck surface and report any discrepancies.
- **Thermal performance:** Refer to Bauder Tapered Insulation Layout Plan for details of 'U' value achieved by this scheme and clause 230.
- **Wastage:** All off-cuts are considered as usable and are included as such within the scheme plan.

REF No:

PROJECT NAME: Southway Junior School

- **Setting out:** Installation must be carried out using the appropriate Bauder Installation Guide and laid strictly in accordance with the Bauder Tapered Installation Layout drawing and installation instructions. The **BauderPIR FA G16 Tapered** boards should be laid with the Bauder number / arrow / grid pattern facing upwards.
 - **Long edges:** Fully supported
 - **End edges:** Fully supported.
 - **Joints:** Close butted together.
 - **End joints:** Stagger.
- **Bedding: BauderPIR FA G16 Tapered** boards are to be bonded to the upper surface of the Air and Vapour Control Layer (AVCL) (unless where a base-layer is required – please see Multiple-layer tapered schemes below) using suitable Bauder Polyurethane Insulation Adhesive:
 - **Bauder PU Insulation Adhesive - Tin** or **Bauder PU Insulation Adhesive – Twin Cartridge** applied in strips following the direction of the board length giving 4No. continuous and equally spaced adhesive beads within each board width (increase to 6No. at the roof perimeter) *
 - **Non-FA Tapered insulation board types:** Where **BauderPIR T G Tapered** Insulation (Unfaced 1:80 / 1:40 boards) or **BauderPIR M Flatboard** Insulation (tissue faced boards) are included within the Bauder Tapered Insulation Layout, these boards are to be bonded to the upper surface of the Air and Vapour Control Layer (AVCL) using either **Bauder PU Insulation Adhesive - Tin** or **Bauder PU Insulation Adhesive – Twin Cartridge**, applied in strips following the direction of the board length giving continuous and equally spaced adhesive beads within each board width as below:
 - 500mm width **BauderVIP TE** insulation boards - 2 no: (increase to 3 no. at roof perimeter)*
 - 600mm width insulation boards - 2 no: (increase to 3 no. at roof perimeter)*
 - 800mm width insulation boards - 3 no: (increase to 4 no. at roof perimeter)*
 - 1000mm width **BauderVIP TE** insulation boards - 4 no: (increase to 6 no. at roof perimeter)*Adhesive bead widths, spray patterns and coverage rates are stated on the appropriate product label and datasheet.
- **Multiple-layer tapered systems:** Where the total thickness of tapered insulation required is greater than can be achieved by a single layer, base-layer board(s) of **BauderPIR FA-TE Flatboard** can be adhered to the AVCL/previous layer(s) to make up the total thickness required before the uppermost layer of **BauderPIR FA G16/ BauderPIR T G Tapered** boards are installed.

Additional Layer(s): Each additional layer of insulation board(s) should be laid off-set and staggered with the layer below and should be bonded together using the following adhesives:
- **Bedding:** As stated above. Surface should be clean and free of debris before application of the additional layer(s)
 - **Foil to Foil (e.g. FA-TE to FA-TE): Bauder Activator Primer (Canister) – APR01-Black** spray applied to the surface of both layers or **Bauder PU Insulation Adhesive – Twin Cartridge** applied in strips following the direction of the board length giving continuous and equally spaced adhesive beads within each board width (as stated above).
 - **Foil to tissue Faced/unfaced boards (e.g FA-TE to 1:80 tapered boards): Bauder PU Insulation Adhesive - Tin** or **Bauder PU Insulation Adhesive – Twin Cartridge**. Applied in strips following the direction of the board length giving continuous and equally spaced adhesive beads within each board width (as stated above).
- **Uppermost layer:** The **BauderPIR FA G16 Tapered** board layer should be bonded using **Bauder Activator Primer (Canister) – APR01-Black** spray applied to the surface of both layers or **Bauder PU Insulation Adhesive – Twin Cartridge** applied in strips following the direction of the board length giving continuous and equally spaced adhesive beads within each board width (as stated above). **BauderPIR FA G16 Tapered** boards should be laid with the

Bauder number/arrow/grid pattern facing upwards. Boards should be laid off-set and staggered with the layer below.

- **Ridge & Valley Infills:** The **BauderPIR GFE G16 (ridge infills) & BauderPIR KFS G16 (valley infills)** should be bonded using **Bauder Activator Primer (Canister) – APR01-Black**, spray applied to the tapered board and bottom of the infill giving continuous full coverage of the infill and the area where the infill is to be placed.
- **Protection to exposed edges of insulation:** Reduced thickness treated timber batten as clause 640 (or equivalent plywood construction), a minimum width of 150mm and 10mm less in thickness than the insulation to accommodate the build-up of the waterproofing layers – all securely fixed to the deck. Outer edges chamfered at changes in level.
- **Completion:** Boards must be in good condition, well-fitting and stable.
- **IMPORTANT NOTES:**
 - **Bauder Activator-Primer (Canister), APR01-Black, must be applied to the uppermost surface of insulation prior to installation of the self-adhesive underlayer.**
 - Foil to Foil installation (e.g. FA-TE to FA-TE) must not be carried out using the 6.5kg **Bauder PU Insulation Adhesive – Tin.**
 - Foil to AVCL installation (e.g. FA G16 Tapered directly to KSD FBS) must not be carried out using **Bauder Activator Primer (Canister) – APR01-Black.**

**BS EN 1991-1-4 uses the following guidance to calculate perimeter zones. Buildings up to and including 10m in height have a perimeter zone of not more than 2m. Buildings over 10m, uses the calculation of 2 x the building height ÷ 10. These are general guidance rules and do not take into account all of the information used in a full wind uplift calculation, they are therefore superseded by a project specific calculation.*

681B INSTALLING WARM ROOF INSULATION (INSULATED UPSTANDS)

- **Bedding:** Bonded to the upper surface of the air and vapour control layer (AVCL) using suitable Bauder Polyurethane Insulation Adhesive. The adhesive should be applied in strips following the direction of the board length giving 3 no. continuous and equally spaced adhesive beads within each board width. Upstand insulation boards should be installed before the insulation to the flat areas so that the vertical upstand insulation is retained both at the base and at the top. Adhesive bead widths are stated on appropriate product label and datasheet.
Note: Where the surface is uneven or difficult to bond to, it is permissible to use suitable thermally broken fixings.
- **Multiple board layers:** Where the total thickness of insulation required is greater than can be achieved by a single standard board, then additional boards can be adhered to the previous layer(s) to make up the total thickness required. These additional boards should be bonded using suitable Bauder Insulation Adhesive.
Foil to Foil Insulation Boards Only: These additional boards should be bonded using either **Bauder Activator Primer (Canister) – APR01-Black** or **Bauder PU Insulation Adhesive – Twin Cartridge.**
Foil to Tissue Faced Boards: These additional boards should be bonded using suitable Bauder Insulation Adhesive.
Adhesive bead widths or adhesive spray patterns and coverage rates are stated on appropriate product label and datasheet.
The adhesive should be applied in strips following the direction of the board length giving 3 no. continuous and equally spaced adhesive beads within each board width. Upstand insulation boards should be installed before the insulation to the flat areas so that the vertical upstand insulation is retained both at the base and at the top.
The second layer of boards should be laid off-set and staggered.
Note: Where the surface is uneven or difficult to bond to, it is permissible to use suitable thermally broken fixings.

REF No:

PROJECT NAME: Southway Junior School

- **Insulated upstand brackets:** Bauder insulated upstand support brackets must be used at all vertical abutment wall upstands (where the wall cavity is insulated) in conjunction with 30mm Bauder insulation. These are to be fixed at 400mm centres using suitable fixings through the air and vapour control layer, so that the top edge is a minimum of 300mm above the surface of the deck. A 3mm gap should be left between adjacent sections. The detail is to be carried out in accordance with the Bauder detail drawing, where provided.
- **Protective hard edges:** treated timber battens or Bauder Insulated upstand brackets (as appropriate to given detail situation) must be used at all right-angled edges e.g. top edges of parapet walls or abutment upstands.
- **Encapsulation seal:** Provision must be allowed for forming a minimum 100mm lap seal between the air and vapour control layer and underlayer where the insulation finishes.
- **Important Notes:**
 - Bauder Activator-Primer (Canister), APR01-Black, must be applied to the facing of the uppermost surface of insulation prior to installation of the self-adhesive underlayer.
 - Foil to foil installation (e.g. FA-TE to FA-TE) must not be carried out using **the 6.5kg Bauder PU Insulation Adhesive – Tin.**
 - Foil to AVCL installation (e.g. FA G16 Tapered directly to KSD FBS) must **not** be carried out using **Bauder Activator Primer (Canister) – APR01-Black.**

WATERPROOF COVERINGS/ ACCESSORIES

710 LAYING REINFORCED BITUMEN MEMBRANES GENERALLY

- **Direction of laying:** Unrolled up the slope.
 - Where practicable, install so that water drains over and not into laps.
- **Side and end laps (minimum):** 100 mm, with the exception of mineral surfaced membranes, where side laps are 80 mm, but the head laps to remain 100 mm.
- **Head and side laps:** Offset.
- **Intermediate and top layer/Capping sheet:** Fully bond.
- **Successive layers:** Apply without delay. Do not trap moisture.
- **Strips of bitumen membrane for 'linear' details:** Cut from length of roll e.g. gutter sole pieces.
- **Detail flashings:** to be cut from width of roll.
- **Completed coverings:** Firmly attached, fully sealed, smooth, weatherproof and free draining.

747A SELF-ADHESIVE BONDING OF REINFORCED BITUMEN UNDERLAYER

- **Bond:** Full over whole surface, with no air pockets.
Please note that Bauder Activator-Primer (Canister), APR01-Black, must be applied to the uppermost layer of Bauder Insulation prior to installation of the self-adhesive underlayer.
- **Underlayer:** Cold applied and fully bonded by removing the peel off release film. The side laps are to be 100mm and must be **laid red over blue**, and heat sealed/torched (depending on 'Flame-Free' & 'Safe to Torch' zones) and rolling with the **Bauder Long Handled Lap Roller** to extrude a continuous bead of bitumen. Head laps to be 100mm and staggered, side laps to be 80mm and heat sealed/torched (depending on 'Flame-Free' & 'Safe to Torch' zones) to extrude a continuous bead of bitumen. The underlayer must be taken up all upstands, edge details, in accordance with current British Codes of Practice and Bauder recommendations. The underlayer must be fully heat sealed/torched (depending on 'Flame-Free' & 'Safe to Torch' zones) with the air and vapour control layer to the full extent of the detail ensuring a minimum 100mm fully bonded lap - please see Bauder Bituminous detail drawings.
- **Alternative underlayer for detail work:** For detailing to un-insulated abutment upstands, where the waterproofing is to be applied to rough or uneven non-combustible surfaces i.e. brickwork or concrete, it is permissible for the installing contractor to use the Bauder underlayer appropriate

REF No:

PROJECT NAME: Southway Junior School

to the specified system where this product is considered to be better for application to these surfaces. For all other situations, and particularly to vertical insulation, the Bauder Self-Adhesive Underlayer appropriate to the specified system must be used.

- **Provision for prevention of wind uplift (where required):** Mechanically fix as per the corresponding project specific wind load calculation, using appropriate thermally broken fasteners (for uninsulated roofs as clause 355A and for warm roofs as clause 355B), fixed through to the deck.
- **Fixing of bitumen membranes to vertical upstands:** Please refer to clause 775.

750A LAYING MINERAL FACED REINFORCED BITUMEN TORCH-ON CAPPING SHEET - 'SAFE TO TORCH' ZONE

- **Bond:** Full over whole surface, with no air pockets.
- **Excess compound at laps of top layer/ capping sheet:** Leave as a continuous bitumen bead extrusion.
- **Laying top layer:** Fully bonded to the underlayer by torching in the approved Bauder manner. Head laps to be 100 mm, side laps to be 80 mm. All laps to upstands, edge details, flashings, etc. to be 100 mm.
- **Fixing of bitumen membranes to vertical upstands:** Please refer to clause 775.
- **Final Inspection:** The finished roof must be thoroughly inspected by the Bauder Site Technician. This is to ensure that any remedial treatment that is necessary can be carried out prior to issuing the guarantee. Failure to ensure the instigation of this inspection will result in the issuing of the Bauder guarantee being put in jeopardy.
- **IMPORTANT NOTE:** The mineral slate finish is a natural product, so the raw material may differ in colour and shade, over which Bauder has no control. There may also be colour variations between each roll of membrane.

FLASHINGS AND DETAIL WORK

773 'FLAME-FREE' & 'SAFE TO TORCH' ZONES - ALTERNATIVE MEMBRANES AND APPLICATION

For detailing application in locations constructed from or within the 'Flame-Free' & 'Safe to Torch' zones to potentially combustible materials or otherwise where it is considered appropriate by the contractor necessary to minimise the potential risk.

- **Primers: Bauder Activator-Primer (Canister), APR01-Black,** must be used when using Bauder self-adhesive membranes and a 'FLAME-FREE' application is required.
- **Underlayers:**

It is permissible to use a Bauder self-adhesive membrane so long as this product is a recognised component of the system specified.

Acceptable alternatives underlayers are listed below: -

- **BTRS: BauderFLEX G4E** to be replaced with **BauderTEC KSA DUO**
- **BauderFlex: Bauder EGV 35 TF** to be replaced with **BauderTEC Sprint DUO**
- **BTRS Plus:** N/A
- **System Airtech:** N/A

NB: Where surface is uneven or not suitable for a self-adhesive membrane and where the surface is of a non-combustible material and is not required to be a 'Flame-Free' or 'Safe to Torch' zone – it is permissible to use a Torch Applied underlayer, so long as the product is a recognised component of the system specified.

Acceptable alternative underlayers are listed below:

- **BTRS: BauderTEC KSA DUO** to be replaced with **BauderFLEX G4E**
- **BauderFlex: BauderTEC Sprint DUO** to be replaced with **Bauder EGV 35 TF**

REF No:

PROJECT NAME: Southway Junior School

- **BTRS Plus:** N/A
- **System Airtech:** N/A
- **Capping sheets:** Where appropriate, the installing contractor can use **BauderTEC KSO-P SN / KSO ALP SN / KSO SN** self-adhesive capping sheet, applied using the hot air hand tools approved for use with bituminous systems. Please note that **Bauder Activator-Primer (Canister), APR01-Black**, must be applied to the underlayer prior to installation of the self-adhesive capping sheet.
BauderTEC KSO-P SN is only available in one colour – Charcoal Grey.
BauderTEC KSO SN is available in two colours – Grey Slate.
BauderTEC KSO ALP SN is available in two colours – Brown.
Self-adhered membranes - For upstands using only self-adhesive membranes, these will need to be mechanically fixed at the top leading edge of the membrane with Bauder aluminium peel bar regardless of the upstand height. This will be for System Airtech and for areas referred to as 'Flame-Free' zones. Please refer to Bauder Bituminous Standard Detail Drawings.
- **Green Roof Notes:** Please note it is strictly only permissible to use self-adhesive capping sheet for flashings and detailing work when installing **BauderGREEN XF 301 Sedum Blanket** or Hard landscaping finishes.
- **Approved Hot Air Equipment**
The **BauderTEC KSO-P SN / KSO ALP SN / KSO SN** membrane must be applied using the approved hot air hand tools. The list of permissible hot air electrical equipment suppliers for installing Bauder waterproofing membranes are stated below. These are available either for purchase or hire from the below companies:

HOT AIR WELDING EQUIPMENT

LEISTER

Contact: Welwyn Tool Group, Tel 01707 331 111, <http://www.welwyntoolgroup.co.uk>

JAMES LISTER & SONS LIMITED

Contact number: 0121 553 2949, Email: sales@lister.co.uk

ETORCH

Contact: Imperial Thermal Engineering Ltd, Tel 01376 330582,
<http://www.imperialthermal.co.uk>

775 SKIRTINGS AND UPSTANDS

- **Angle Fillets:** **BauderPIR T KL 50 angle fillets (50 mm x 50 mm)** must be used at all right-angled upstands.
 - Warm Roof Construction: Provisionally bonded in suitable **Bauder Polyurethane Insulation Adhesive** or **Bauder Activator-Primer (Canister), APR01-Black**, and subsequently retained once the underlay detailing is applied.
 - Cold/Inverted Roof Construction: Coat both the surface area to receive the angle fillet and the angle fillet with **Bauder Activator-Primer (Canister), APR01-Black**. Once both surfaces are tacky, place the angle fillet in the correct location and apply pressure to the angle fillet to ensure adhesion is achieved.
- Important note** - under no circumstances must fillets of an alternative material be incorporated (i.e. timber, cork, fibre, etc.) as this would invalidate the guarantee.

REF No:

PROJECT NAME: Southway Junior School

- **Layers of bitumen membrane:** Carry in staggered formation up the upstand, with each layer fully bonded.
- **Upstands:**
 - **At ends of rolls:** Underlay layer only, form with bitumen membrane carried up without using separate strip.
 - **Elsewhere:** Form with matching strips of bitumen membrane, maintaining laps.
- **Upstand details (150mm minimum height):** This must be taken from the finished roof surface. Please note that for landscaped roofs, this minimum height is measured from the finished landscape surface as opposed to the waterproofing surface. *Special attention should be paid to all structures, such as rooflights, counter-flashings, window and door cills, pipes etc. Bauder cannot take responsibility for water ingress over waterproofing details constructed below the recommended minimum height.
- **Level Thresholds:** Acceptable, providing conforms to BS6229:2018 and current NHBC Standards, chapter, 7.1.

Requirements:

- Minimum 75mm upstand height. (This must be taken from the waterproofing or top of the insulation if an inverted roof).
- Falls are directed away from the door cill.
- Waterproofing is dressed up and under the door cill. Prior to installation of the door frame, the membranes must be dressed up the reveal to a minimum 150mm in height.
- Door cill has a minimum 45mm overhang.
- Provision is made for emergency overflow to prevent water getting to the waterproofing and cill interface.

Any level threshold details not meeting this standard cannot be guaranteed by Bauder.

Note: Bauder recommends the installation of a linear drain (**BauderGREEN ER MR 150/60 linear drain and grill plate** is suitable for this purpose) in front of the access door threshold, to help prevent rainwater splash back and snow build-up.

- **Flashings:** Separate flashings must always be formed. Capping sheet taken up the upstand in one piece will not be permitted.
- **Green Roof Notes:** If the client should desire not to see a green mineral finish then it is permissible to install a piece of suitable colour Bauder bituminous capping sheet membrane. The Bauder root resistant capping sheet must be taken a minimum 150mm from the finished landscaping surface*. The suitable coloured Bauder bituminous capping sheet must be lapped onto the Bauder root resistant capping sheet by a minimum 150mm and lapped onto the structure by a minimum of 100mm.
- **Fixing of bitumen membranes to vertical upstands:**
Where upstands terminate in excess of 250mm above the finished surface of the main field area capping sheet, screw fix through into the underlying substrate as per the requirements set out below and in accordance with the Bauder Reinforced Bitumen Membrane Installation Guide.

UNDERLAYER - INSULATED UPSTANDS ONLY:

Prior to the installation of the self-adhesive underlayer, ALL insulation board types used to create an insulated upstand require a coating of **Bauder Activator-Primer** applied to the surface of the insulation board. The Activator-Primer should be applied at a rate of 96g/m². Insulated upstands exceeding 600mm in height will require additional fixings through the insulation board depending on the board type used, at a rate of:

- **BauderPIR FA-TE**, 5No. fixings, one in each corner and one in the centre
- **BauderROCK**, 1No. fixing, in the centre of the board.
- **BauderGLAS** 1No. fixing, in the centre of the board.

CAPPING SHEETS - ALL UPSTANDS:

Terminating on the vertical: Where the capping sheet is required to terminate on a vertical face, a **Bauder Aluminium peel bar** is to be used, mechanically fixed at 150mm centres (as per

pre-drilled holes) with appropriate fixings suitable to the substrate. Unless protection is being provided to the top leading edge of the membrane and fixing penetrations by an external component, the termination should then be covered with the specified counter flashing material dressed over the top to ensure waterproofing integrity.

Should a traditional lead counter flashing be used, then a separating tape will need to be used between the aluminium bar and lead flashing.

Please note: *A Bauder termination bar is not to be used in this scenario unless it has been specified by Bauder. Termination bars are not suitable for brickwork substrates. No additional membrane cover flashing is required.*

Terminating on the horizontal: Where the capping sheet is taken onto the horizontal, e.g. on top of the parapet, the membrane must be fixed (using fixings appropriate and suitable to the substrate) with either:

- A **Bauder Aluminium peel bar**, mechanically fixed at 150mm centres (as per pre-drilled holes).
- 5No. screws and washers per capping sheet width, one fixing set in 50mm from the edge of either side of the sheet, with the three remaining fasteners equally spaced in between.
- A **Bauder GRP Trim**, mechanically fixed at 300mm centres (maximum) using screw fasteners of type appropriate to kerb or deck substrate. Nail fixing is not permitted.

Capping sheet cover flashing: - A separate flashing of Bauder capping sheet will be required to cover the fixings (please see Bauder detail drawings).

Please note: *Upstands using only self-adhesive membranes (E.g. System Airtech and areas referred to as 'Flame-Free' zones) will need to be mechanically fixed at the top leading edge of the membrane with a Bauder aluminium peel bar regardless of the upstand height, unless it is retained by a GRP Trim on the horizontal.*

Where an exposed edge of Bauder capping sheet terminates on its vertical edge, a separate lead cover flashing must be installed to protect the edge of the exposed membrane. This lead flashing must extend onto the membrane by a minimum 100mm and to the full height of the vertical flashing, then extended underneath the horizontal cover flashing to protect the top leading edge.

Upstands that exceed approximately 1100mm: -

Bauder Ltd do not advocate the use of bitumen waterproofing on upstands exceeding approximately 1100mm due to consideration of the fire regulations. This should be carried out in an appropriate alternative as specified by the client. Please consult with Building Control for confirmation of upstand waterproofing requirements where the height exceeds 1100mm.

MECHANICAL FASTENER SUPPLIER

SFS Group Fastening Technology Ltd. 153 Kirkstall Road, Leeds, West Yorkshire. LS4 2AT

Tel: +44 (0)113 208 5500, Fax: +44 (0)113 208 5539, Email: uk.leeds@sfsintec.biz

Web: www.sfsintec.biz/uk

Mechanical Fasteners:

Type: IWF-5.2x35 screws together with associated IFC/IW-82x40 galvanised pressed steel washer plates.

777 SECONDARY WEATHERING (PIPES, DUCTING etc.)

- Provision must be made to supply and install a secondary weathering flashing above all waterproof upstand detailing to pipe penetrations, balustrade posts, cable entry pipes, ventilation ducting, sun pipes etc. This can take the form of a welded collar (where appropriate) or a bespoke galvanized cowling or hood sealed with a suitable sealant and fasteners. Solvent welded plastic collars fitted to plastic soil vent pipes.

785 FIXING PERIMETER TRIMS

REF No:

PROJECT NAME: Southway Junior School

- **Important note:** To be used on parapets and perimeter kerbs with an inward fall or are less than 200mm in width.
- **Bituminous Membranes:**
 - The first layer of membrane **must** be self-adhesive and dressed to the full extent of the detail using Flame-Free methods. This is to ensure that the detail is fully encapsulated to reduce the risk of fire to exposed combustible materials.
 - Dress the underlayer up and over the perimeter detail to provide a 25mm overhang. Please refer to Bauder standard detail drawings.
- **Trim:**
 - **Trim face depth:** 1=44mm, 2=44mm, 3=70mm, 4=100mm, 6=150mm
 - **Colour:** Type 1 & 2 = Black Type 3, 4 & 6 = Black or Grey
 - **Setting out:** 10mm gap between the back edge of the bottom of the drip to the fascia/wall and 3mm gap between abutting lengths of trim.
 - **Fasteners:** Screw fasteners of type appropriate to kerb or deck substrate. Nail fixing is not permitted.
 - **Fixing:** 30mm from ends and at 300mm (maximum) centres, stagger fixed. **Can be used to retain the capping sheet where the capping sheet is taken to the full extent of the detail – please see Bauder detail drawing.**
 - 150mm deep trims (type 6) – 3no. additional fixings per length of trim. The fixings are to be face fixed with screws and positioned 75mm down from the top edge, one fixing 100mm in from each end and one in the centre and capped with coloured matched plastic weathering caps. *A fixed timber packer will be required behind the face of the trim to help facilitate ease of fixing.*
 - For roofs above 10 metres in height – the 100mm deep trim (type 4) will require face fixing, as per 150mm trim above. *A fixed timber packer will be required behind the face of the trim to help facilitate ease of fixing.*
 - **Jointing sleeves / bridging piece:** All lengths should be close butt jointed using an internal jointing sleeve. This must be provided to each joint.
 - **Corner pieces:** Purpose made.
- **Completion:**
 - **Contact surfaces:** Prime with **Bauder Primer**.
 - **Joints:** Cover with 200mm long pads of bitumen membrane, bonded to trim.
- **Completion of bitumen membrane:**
 - **Top layer/ Capping sheet:** Butt joint to rear edge of trim.
 - **Cover strip:** Fully bond to trim and top layer/ capping sheet of bitumen membrane. Carry over roof edge upstand and lap 100 mm onto roof. The capping sheet is to be dressed tightly into the top lip of the trim, ensuring a bead of bitumen extrudes at the edge. Please see Bauder detail drawing.
- **Wall / kerb joints:** The new trim must cover any open joint that may exist at the top of the kerb or wall, by a minimum distance of 20mm.
Where the top of the parapet is installed flat or has no inward fall, we would strongly recommend using the GRP Water Check Trim to avoid any standing water being blown over the trim and staining the brickwork/render.

786 LIGHTNING CONDUCTOR CLIPS

- The lightning conductor is to be fixed using the specified conductor clips, incorporating a colour matched Bauder capping sheet pad, fully bonded to the main capping sheet at 1m centres by the approved Bauder roofing contractor. Lightning conductor retention using bituminous membrane strips are not acceptable.

REF No:

PROJECT NAME: Southway Junior School

- Where lightning conductors are required to be fixed to brickwork, upstands, parapet walls etc., proprietary clips mechanically fixed should be utilised. Care should be taken to ensure that fixings do not penetrate the new waterproofing system.

COMPLETION

910 INSPECTION

- **Interim and final roof inspections:** in accordance with the manufacturer's requirements for guarantee.
- **Notification:**
Final Inspection: It is the responsibility of the approved contractor to advise Bauder Ltd when the roof is ready for Final Inspection. The 'Final Inspection' of the waterproofing must be carried out and approved by Bauder Ltd prior to any landscaping products/materials being installed, otherwise a guarantee cannot be issued. Safe access to carry out this inspection must be provided.
- **Other requirements:** Please also refer to preliminaries / general conditions.
- **If project needs to follow NHBC Requirements:** The waterproofing must be visually inspected and electronically tested for waterproofing integrity, faults rectified, and retested prior to the installation of any landscaping products. The results of the test(s) should be made available to the NHBC.

940 COMPLETION

- **Roof areas:** Clean.
- **Outlets:** Clear.
- **Work necessary to provide a weather tight finish:** Complete.
- **Storage of materials on finished surface:** Not permitted.
- **Completed membrane:** Do not damage. Protect from chemicals, traffic and adjacent or high-level working.

950A GUARANTEE

- A 25 year system product and workmanship guarantee is to be provided upon completion following a Final Inspection by Bauder. Details regarding the full terms and conditions are available separately from Bauder Ltd upon request. This system must be installed by a Bauder Approved Contractor, to be eligible for guarantee. The system comprises the waterproofing membranes, insulation, air and vapour control layer, and attachment of these products.

Bauder reserves the right to amend information and product specifications without prior notice. All reasonable care has been taken to ensure that the information is current and correct at the time of issue. Please note that any future regulation changes could result in this specification requiring an update. In the case of a previous roof survey a new survey will be necessary to establish if the condition has further deteriorated and therefore if the specification requires amendment. The specifier is responsible for ensuring that this specification information is still current prior to issue, as Bauder Ltd can accept no liability for any resulting errors or omissions. Any deviation or modification to this specification without Bauder's consent may result in the system not achieving the stated Fire Performance or Guarantee Requirements.