


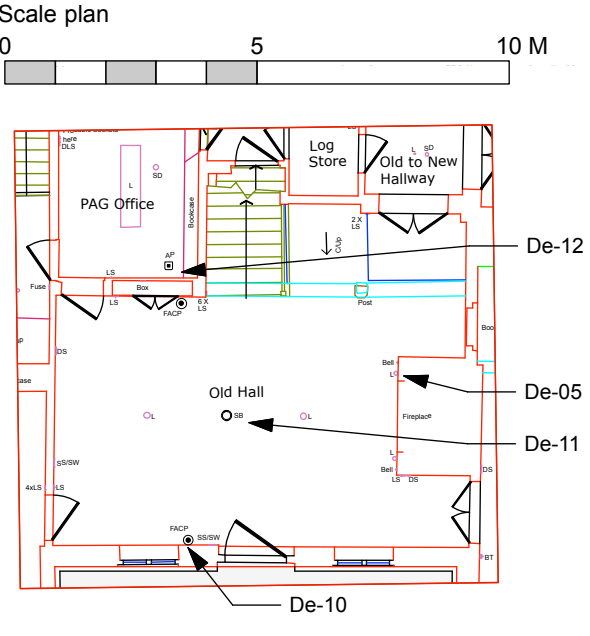


OLD HALL PLAN



OLD HALL PHOTOS



De-05

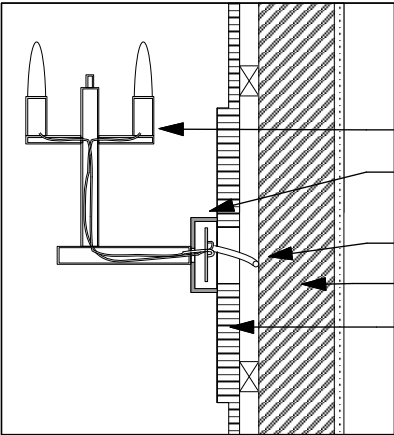


DETAIL - De-05

Rewire light fitting on timber panelling

1. Make the light fitting safe by turning off power to the fitting from the fuse board.
2. Remove the light fitting and store safely for reinstallation.
3. From the floor above remove floor finishes carefully so they can be refixed after the works are complete.
4. Remove the minimum number of floorboards to access the wiring above. Floor boards to be carefully removed so they can be refixed after the works are complete.
5. Use the existing wiring and connect the new wiring to it. Then use the old wiring as a draw wire and draw the new wiring down to the light fitting position. If this does not work, then use rods to fish the cable down the fittings position.
6. Fit new wiring to light fitting location and connect to the new fuse board.
7. Before refitting the light fitting check its internal wiring and replace wiring with new wiring if required.
8. Make any repairs required to the fitting and relamp with new energy efficient bulbs to match the original bulbs.
9. Fit the light fitting and test the installation.

DETAIL - De-05 Notes

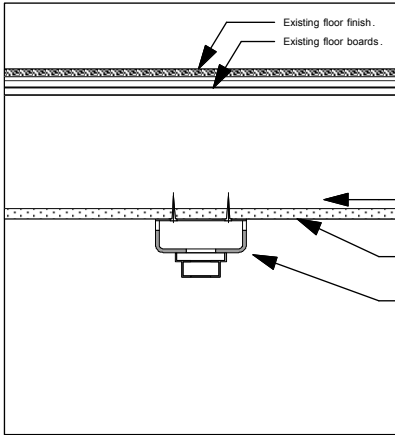


DETAIL - De-11

Fixing Sounder Base or Smoke Detector on ceiling

1. The new system is wireless, so no wiring is required to the fitting.
2. Screw fix the Sounder Base or smoke detector to the ceiling.
3. Once all the components are fitted, test the installation.

DETAIL - De-11 Notes

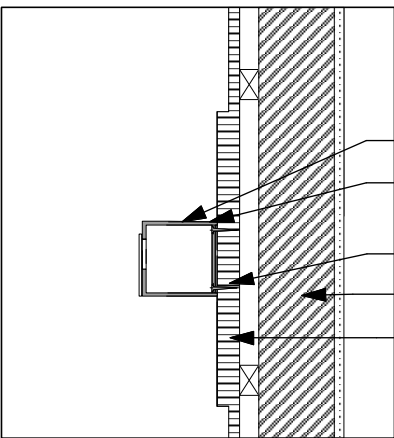


DETAIL - De-10

Fixing Fire Alarm Call Point on timber panelling

1. The new system is wireless, so no wiring is required to the fitting.
2. Screw fix the Fire Alarm Call Point to the timber panelling.
3. Once all the components are fitted, test the installation.

DETAIL - De-10 Notes

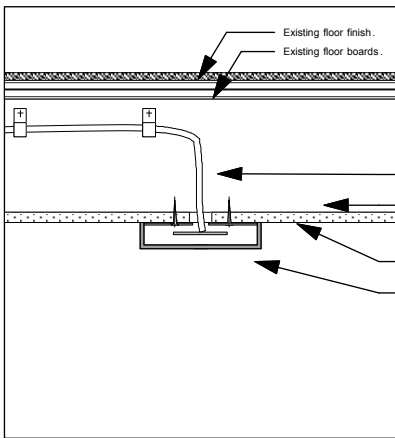

DETAIL - De-12

WiFi Access Points wired in with cabling

1. Test ceiling plaster to make sure it is safe work with and does contain anthrax or asbestos or other contaminants.
2. From the floor above remove floor finishes carefully so they can be refixed after the works are complete.
3. Remove the minimum number of floorboards to access the wiring above. Floor boards to be carefully removed so they can be refixed after the works are complete.
4. Fit new wiring to Access Points and connect to the new system.
5. Once all the components are fitted, test the installation.

DETAIL - De-12 Notes



B	Drawing revised.	11 08 25	MW
A	Drawing revised.	24 02 25	MW
Rev.	Description	Date	Check by
1. Do not scale this drawing. The Contractor is to verify all dimensions & conditions on site and report any discrepancies to the Architect before proceeding.			
2. This drawing is to be read in conjunction with all relevant project documentation.			
3. This drawing is subject to the approval of the appropriate Statutory Authorities.			
PERSEVERANCE ARCHITECTS			
PERSEVERANCE ARCHITECTS LTD Three Brew Eagle House 103 City Road London EC1V 1NR +44 (0) 20 3773 8880 mail@perseverancearchitects.co.uk www.perseverancearchitects.co.uk			

Project :		STONE HALL HAYWARDS HEATH RD, BALCOMBE HAYWARDS HEATH RH17 6QN	
Title :		INTERNAL DETAIL SHEET 2 PROPOSED	
Scale :		1:150 @ A3 & 1:10 @ A3	Date : 22 02 2024
Drawn by : MS		Checked by : MW	
Drawing No. : 2304_PL_302		Revision : B	
Status : PLANNING			
© PERSEVERANCEARCHITECTS LTD			