



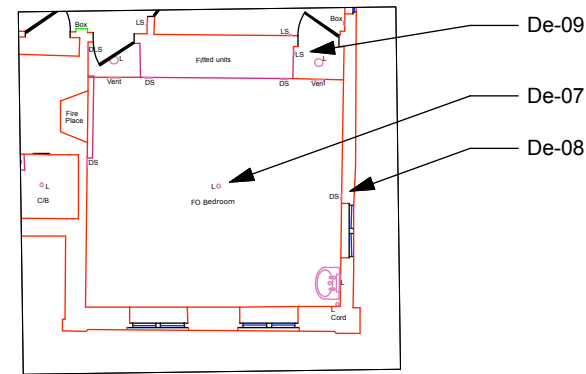

BEDROOM PLAN

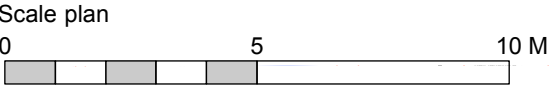

BEDROOM PHOTOS




De-07

De-09

Rewire existing chandelier

1. Test ceiling plaster to make sure it is safe work with and does contain anthrax or asbestos or other contaminants.
2. Make the light safe by turning off power to the fitting from the fuse board.
3. Remove the light fitting and store safely for reinstallation.
4. Fit new wiring to ceiling rose and connect to the new fuse board.
5. Before refitting the chandelier check its internal wiring and replace wiring with new wiring to match the style of the fitting.
6. Make any repairs required to the fitting and relamp with new energy efficient blubs to match the original bulbs.
7. Fit the light fitting and test the installation.

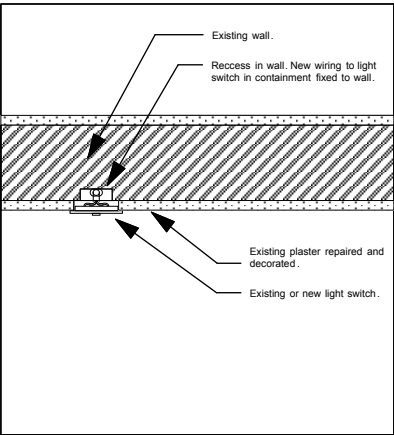


DETAIL - De-09

Rewire light switch on plastered wall


1. Test wall plaster to make sure it is safe work with and does contain anthrax or asbestos or other contaminants.
2. Make the light switch safe by turning off power to the fitting from the fuse board.
3. Remove the light switch and store safely for reinstallation.
4. If the existing wiring is housed within containment within the plaster use the existing wiring and connect the new wiring to it. Then use the old wiring as a draw wire and draw the new wiring down to the light switch position. If this does not work. Then remove the plaster for the length of the wiring run.
5. Fit new containment for the wiring the fit the new wiring from the switch to the ceiling rose and connect to the new fuseboard.
6. Fit the new switch plate, new proposed material and style.
7. Fit the light switch and test the installation.

DETAIL - De-09 Notes

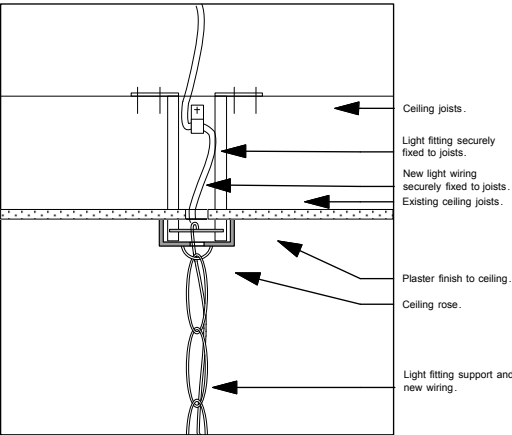

DETAIL - De-07

DETAIL - De-07 Notes

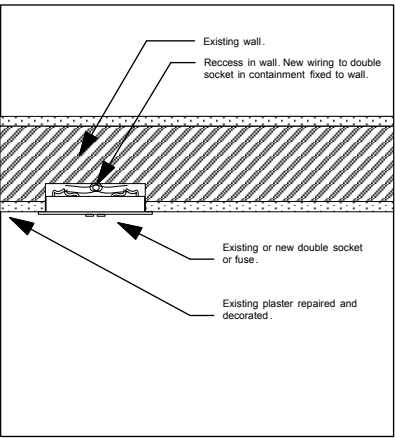


DETAIL - De-08

Rewire double socket or fuse on plastered wall

1. Test wall plaster to make sure it is safe work with and does contain anthrax or asbestos or other contaminants.
2. Make the double socket safe by turning off power to the socket from the fuse board.
3. Remove the double socket and store safely for reinstallation.
4. Remove floor finishes carefully so they can be refixed after the works are complete.
5. Remove the minimum number of floorboards to access the existing wiring. Floor boards to be carefully removed so they can be refixed after the works are complete.
6. Remove the plaster for the length of the wiring run. New wiring is to be housed within containment within a recess in the wall then plastered over.
7. New wiring to go from the double socket to the new fuseboard.
8. Fit the new double socket or fuse, new proposed material and style.
9. Fit the fittings and test the installations.

DETAIL - De-08 Notes

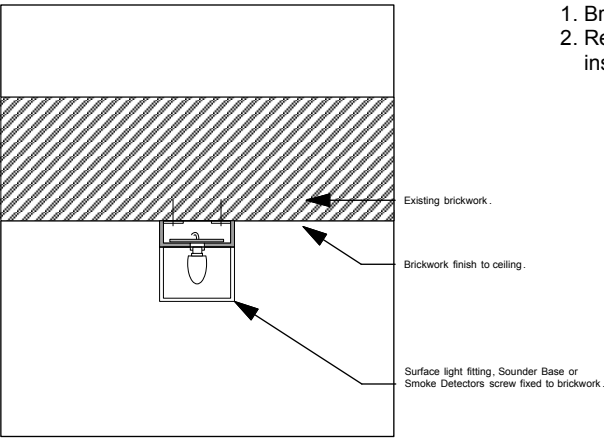

DETAIL - De-15

Rewire and fit surface light fittings

1. Brickwork ceiling surface.
2. Rewire and fit the surface light fitting and test the installation when complete.

DETAIL - De-15 Notes



A	Drawing revised.	11 08 25	MW
Rev.	Description	Date	Check by

1. Do not scale this drawing. The Contractor is to verify all dimensions & conditions on site and report any discrepancies to the Architect before proceeding.

2. This drawing is to be read in conjunction with all relevant project documentation.

3. This drawing is subject to the approval of the appropriate Statutory Authorities.

PERSEVERANCE ARCHITECTS

PERSEVERANCE ARCHITECTS LTD
Three Brew Eagle House
163 City Road
London EC1V 1NR
+44 (0) 20 3773 8880
mail@perseverancearchitects.co.uk
www.perseverancearchitects.co.uk

Project :
**STONE HALL
HAYWARDS HEATH RD, BALCOMBE,
HAYWARDS HEATH RH17 6QN**

Title :
**INTERNAL DETAIL SHEET 4
PROPOSED**

Scale : 1:150 @ A3 & 1:10 @ A3 | Date : 22 02 2024

Drawn by : MS | Checked by : MW

Drawing No. : 2304_PL_304 | Revision : A

Status :
PLANNING

© PERSEVERANCEARCHITECTS LTD