


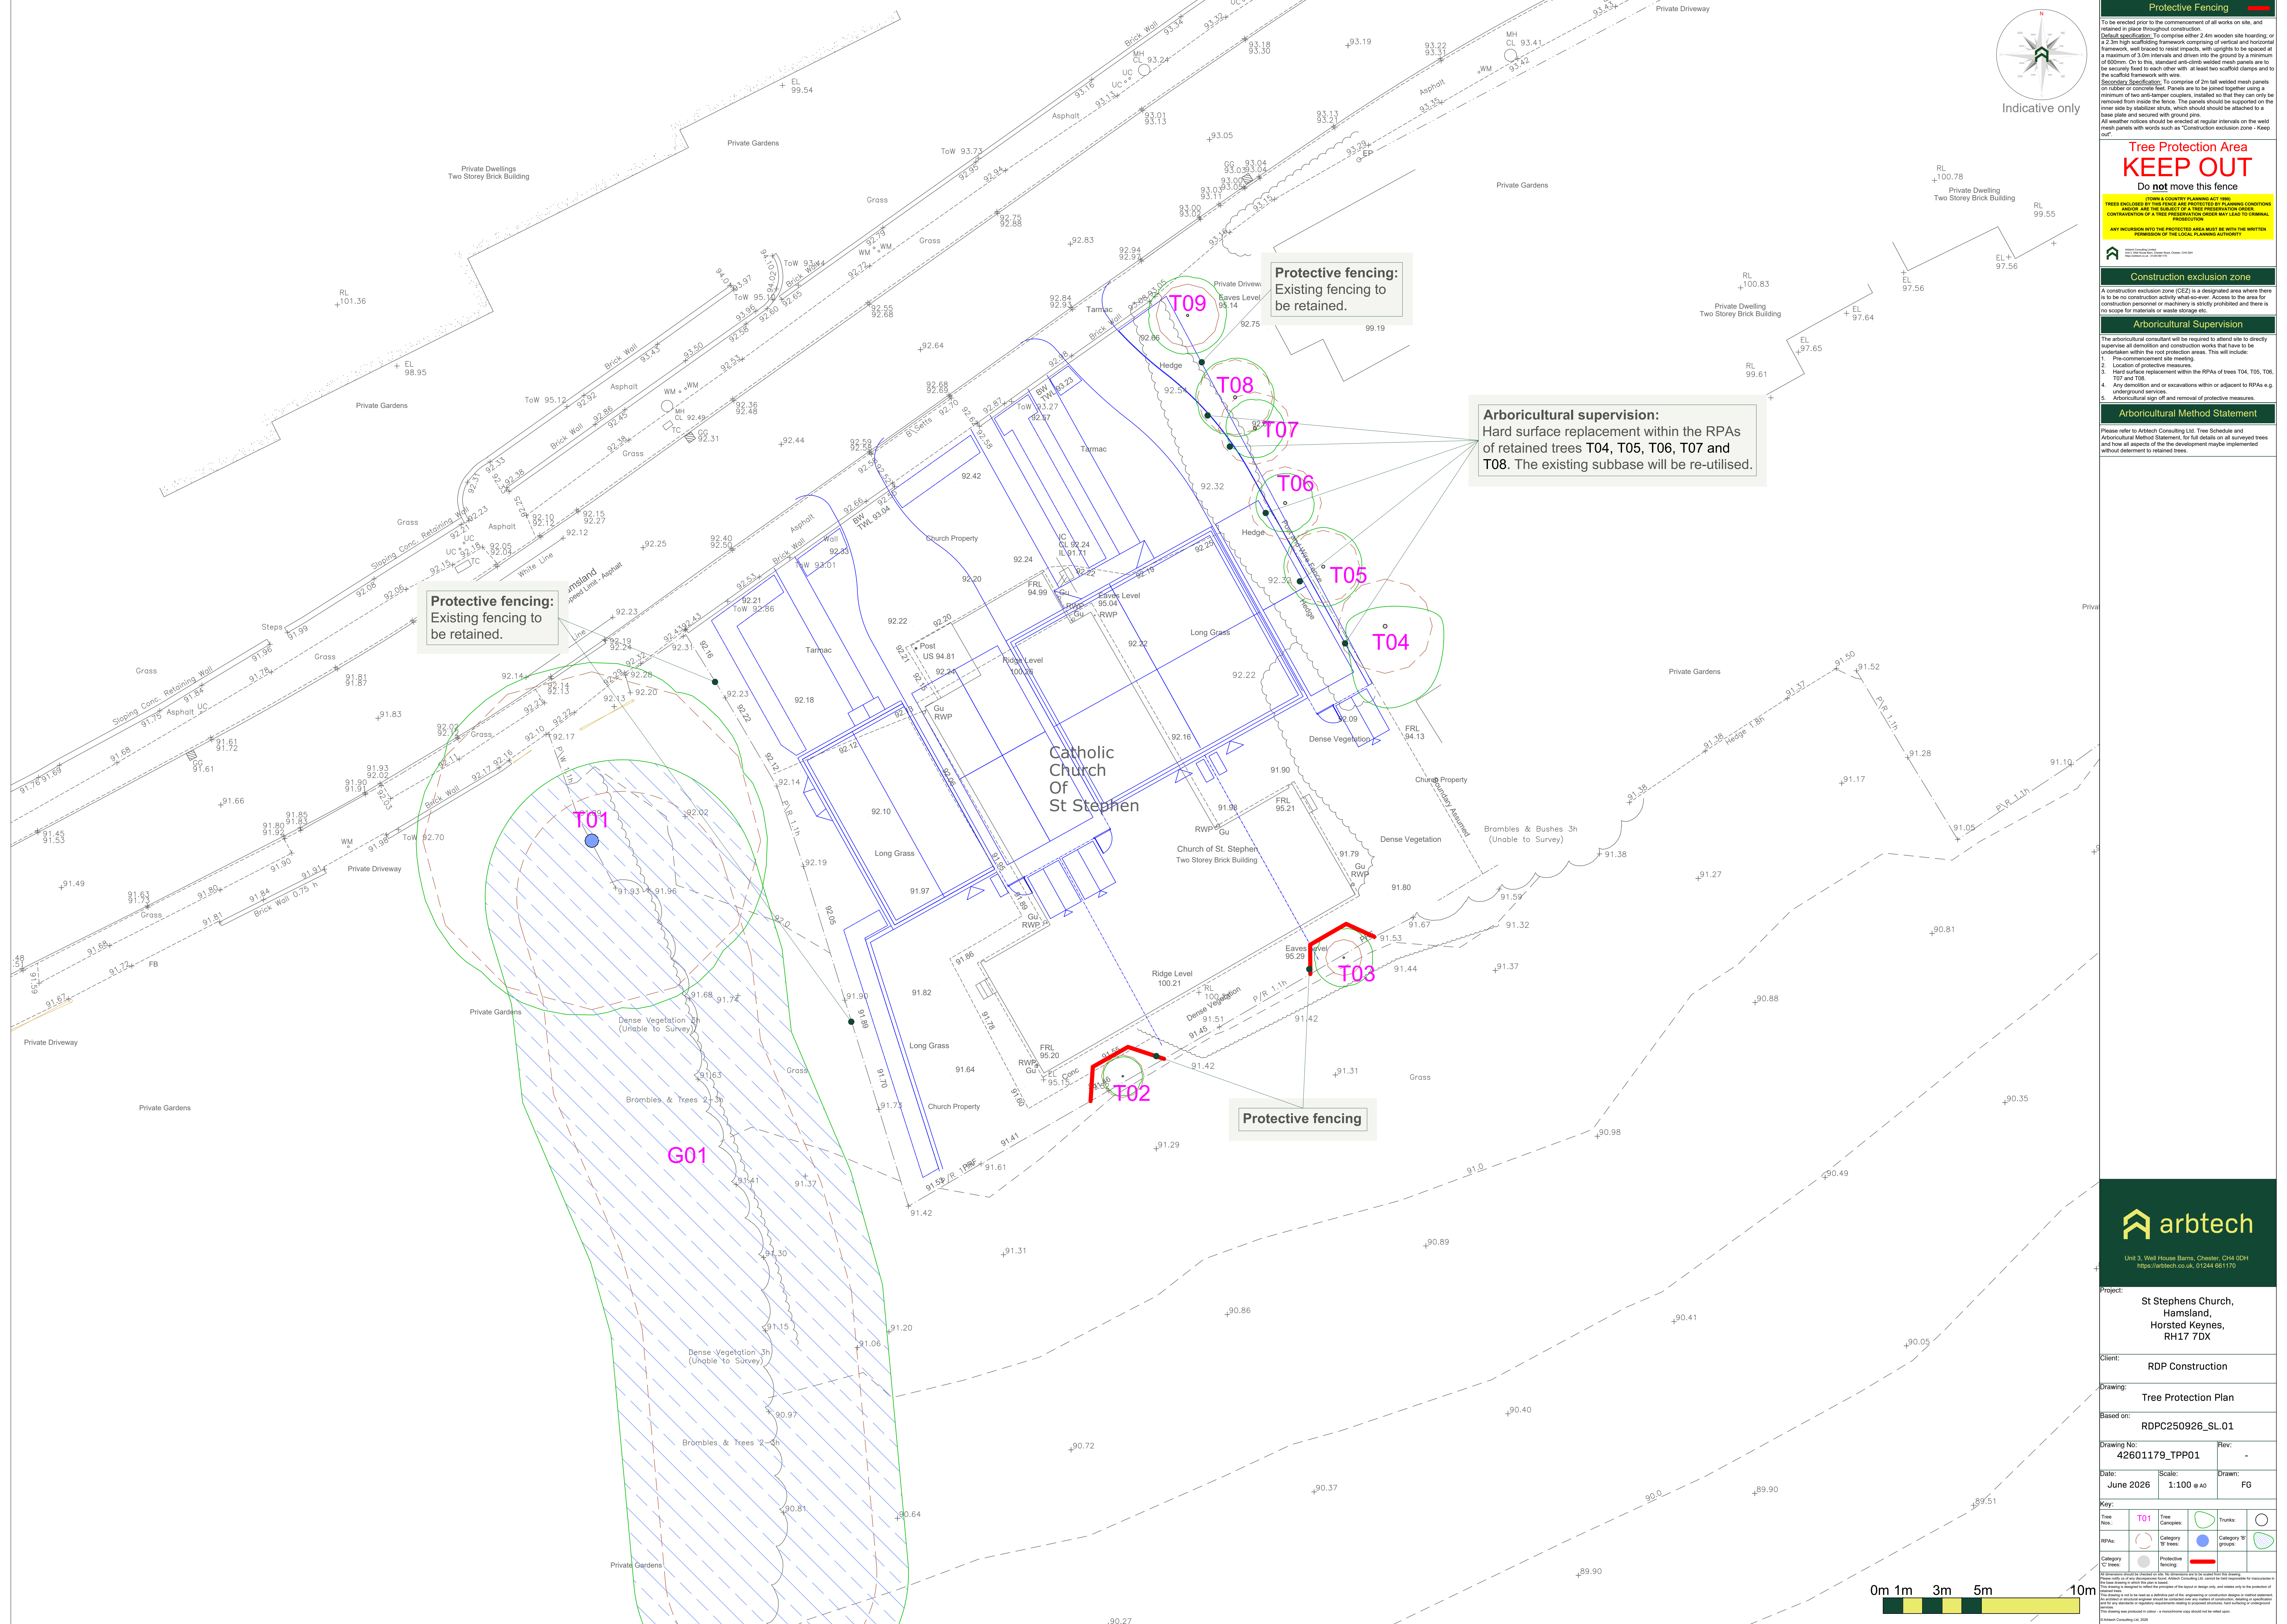

Protective Fencing

To be erected prior to the commencement of all works on site, and retained in place throughout construction.

Default specification. To comprise either 2.4m welded mesh spacing or 3.0m horizontal and 2.4m vertical spacing of vertical and horizontal panels, well braced to resist impacts, with uplights to be spaced at a maximum of 3.0m intervals and driven into the ground by a minimum of 600mm. On this, standard anti-climb welded mesh panels are to be secured to the ground with at least two welded clamps and to the scaffold frame with wire.

Secondary Specification. To comprise of 2m tall welded mesh panels on rubber or concrete feet. Panels are to be joined together using a minimum of two anti-tamper couplers, installed so that they can only be removed by the use of a screwdriver. The mesh should be supported on the inner side by stabilizer struts, which should be attached to a base plate and secured with ground pins.

All weather notices should be erected at regular intervals on the weld mesh panels with words such as "Construction exclusion zone - Keep off".

Tree Protection Area
KEEP OUT
Do not move this fence

(TOWN & COUNTRY PLANNING ACT 1966)
TREES ENCLOSED BY THIS FENCE ARE PROTECTED BY PLANNING CONDITIONS
AND/OR ARE THE SUBJECT OF A TREE PRESERVATION ORDER.
CONTRAVENTION OF A TREE PRESERVATION ORDER MAY LEAD TO CRIMINAL
PROSECUTION

ANY INCURSION INTO THE PROTECTED AREA MUST BE WITH THE WRITTEN
PERMISSION OF THE LOCAL PLANNING AUTHORITY

 Architect: Extrastudio L.P. (Pvt.) Ltd.
Unit 3, West Pineside Road, Chatterjee, Gurgaon 122001
<http://extrastudio.co.uk> - 91-886 80 1576

Construction exclusion zone
A construction exclusion zone (CEZ) is a designated area where there is to be no construction activity what-so-ever. Access to the area for construction personnel or machinery is strictly prohibited and there is no scope for materials or waste storage etc.

Arboricultural Supervision

The arboricultural consultant will be required to attend site to directly supervise all demolition and construction works that have to be undertaken within the root protection areas. This will include:

1. Pre-commencement site meeting.
2. Location of protective measures.
3. Hard surface replacement within the RPA's of trees T04, T05, T06, T07 and T08.
4. Any demolition and/or excavations within or adjacent to RPA's e.g. underground services.
5. Arboricultural sign off and removal of protective measures.

Arboricultural Method Statement

Please refer to Arbtech Consulting Ltd. Tree Schedule and Arboricultural Method Statement, for full details on all surveyed trees and how all aspects of the the development may be implemented without detriment to retained trees.



Unit 3, Well House Barns, Chester, CH4 0DH
<https://arbtech.co.uk>, 01244 661170

Project: St Stephens Church,
Hamsland,
Horsted Keynes,
RH17 7DX

Client:	RDP Construction
---------	------------------

Drawing:

Tree Protection Plan

Based on:

RDPC250926_SL.01

Drawing No:	Rev:
42601179_TPP01	-
Date:	Scale:
	Drawn:

June 2026	1:100 @ AD	FG
Key:		

Tree Nos.:	T01	Tree Canopies:		Trunks:	
RPA's:		Category 'B' trees:		Category 'B' groups:	
Category 'C' trees:		Protective fencing:			

This drawing is not to be used as a definitive part of the engineering or construction designs or method statements. An exhibited or structural engineer should be consulted over any matters of interpretation, detailing or specification and standards or regulatory requirements relating to proposed structures, fastenings or underground services. This drawing was prepared in colour - a monochrome copy should not be relied upon.