




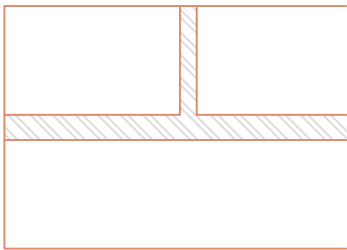


The front elevation displays limewashed areas and also "penny rolled" pointing

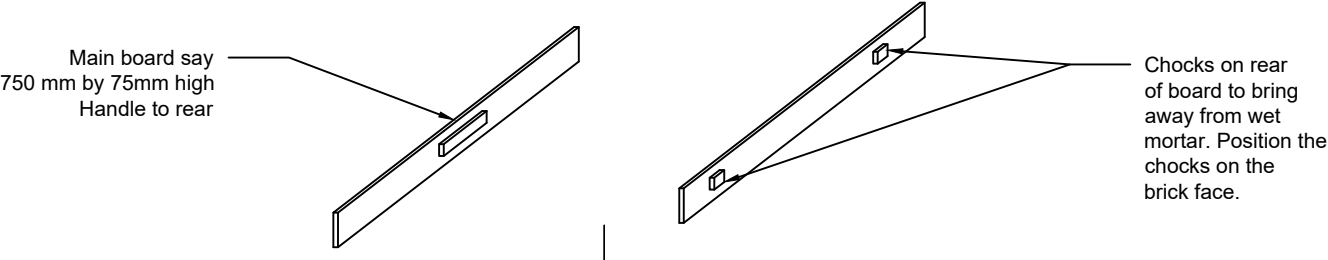


With any bricks re-laid as required, the bed joint can be left semi-flush or flush

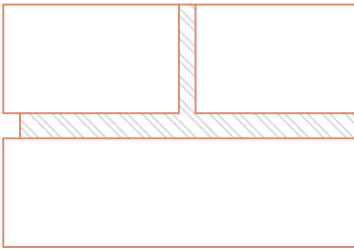

With the mortar starting to set up, rake back from the face by 10 mm.

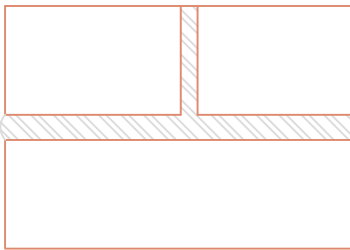

With the same mix (but mixed through and with correct consistency) re-point the joint with a slight convex/camber

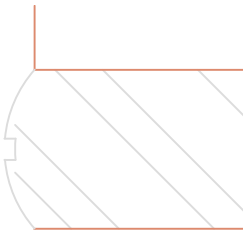

With the tool shown above and a tuck pointing iron or timber edge, create a 3 mm wide, 1 mm deep impression in the pointing surface. Leave the mortar after this point, do not attempt to dress it further.